

LIFT CLEANING

⚠ CAUTION

NEVER use water or corrosive products to clean; these solutions accelerate the corrosion and can contribute of paint peeling.
NEVER CLEAN with the air stream: risk of flying debris that could cause injury.
NEVER CLEAN with a pressure machine; risk of damaging the paint, silicone seals or spreading debris inside the fixed columns.

Light Cleaning – *Use this method if the lift is maintain daily.*

- Daily clean the lift with a clean and dry rag, including cylinder bases and columns bases.
- Lubricate cylinder bases and column bases. See document DOC-ING-LUBLIFT-EN or refer to the MAINTENANCE AND INSPECTION of the Installation manual & Operating Instructions.

Heavy-Duty Cleaning – *Use this method if lift cleaning has been neglected or to remove stubborn residue.*

- Daily clean the lift with a clean and dry rag, including cylinder bases and columns.
Scrape if needed
- Coat cylinder bases and column bases with brake cleaner to dislodge stubborn residue.

⚠ CAUTION

Quickly remove the brake cleaner; this product accelerates paint peeling.

- Clean with a dry and clean rag.
- Lubricate cylinder bases and column bases. See document DOC-ING-LUBLIFT-EN or refer to the MAINTENANCE AND INSPECTION of the Installation manual & Operating Instructions.