

## LIFT LUBRICATION

### ⚠ CAUTION


Never use a dry lubricant with no Teflon (eg Jig-a-loo) to lubricate the inside of the four corners of the columns : the use of any other lubricant could cause an accumulation of particles, dirt and dust. This cluster becomes a paste over time and can make raising and lowering of the columns difficult.

### GENERAL LUBRIFICATION

- Clean the lift components beforehand. See document LIFT CLEANING # DOC-ING-LIFTCLEANING or refer to the MAINTENANCE AND INSPECTION INSTRUCTIONS of the installation manual & operating instructions.
- Lubricate the lift with a dry Teflon-based lubricant: the 4 inside corners of the columns from top to bottom, and under the male part of lifting arms in his extended position.

### BASES OF CYLINDER AND BASES COLUMNS LUBRIFICATION

- Clean the bases of the cylinders and the bases of the columns beforehand. See document LIFT CLEANING # DOC-ING-LIFTCLEANING or refer to the MAINTENANCE AND INSPECTION INSTRUCTIONS of the installation manual & operating instructions.
- Lubricate the edge between the cylinder base and column bases, and the bolt of the cylinder base with automatic transmission oil. See **Figure 1** in dotted line.

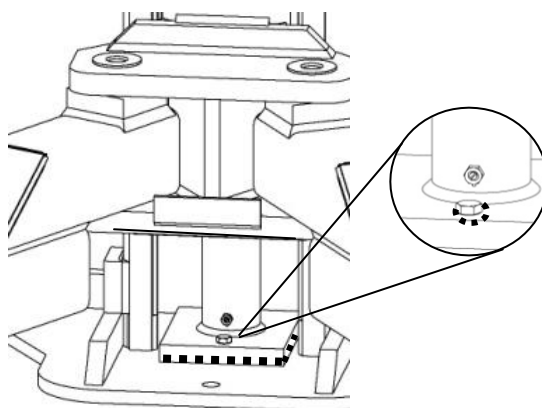

**FIGURE 1 : BASE CYLINDER LUBRIFICATION**